
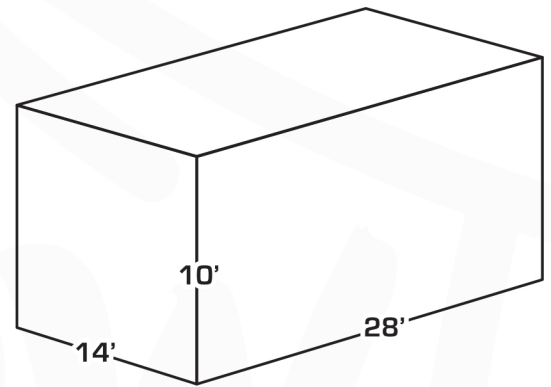


TENT COMPONENTS



- | | |
|------------------------------------|------------------------------|
| A - Base & Roof Poles (long side) | H - Front/Back Center Pieces |
| B - Top Wall Poles | I - Top/Bottom Center Pieces |
| C - Bottom Wall Poles | J - Corner Pieces |
| D - Base & Roof Poles (short side) | K - Roof Skin |
| E - Roof Cross Poles | L - Wall Skin |
| F - Roof Cross Poles | M - Floor Skin |
| G - Center Roof Piece | N - Floor Liner |

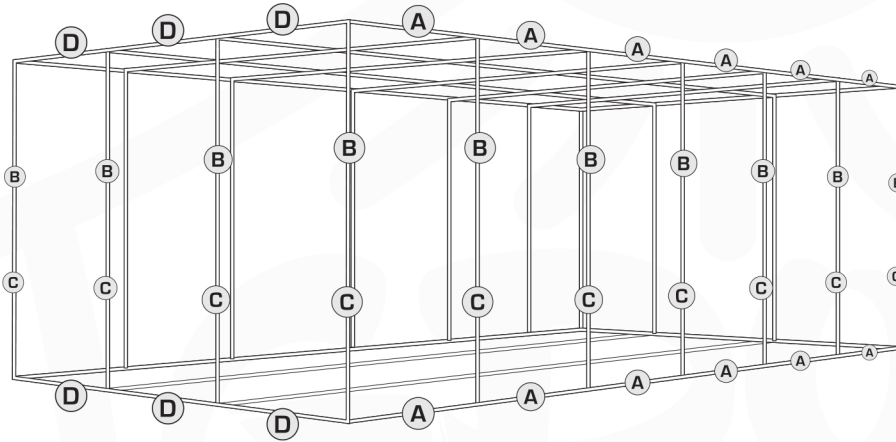

AgroMax Grow House grow tents are LARGE AND IN CHARGE! The AgroMax Grow House is taking grow tents to the next level - super tall, super large and designed for commercial scale usage! Measuring an impressive 14' wide x 28' long and 10' tall the AgroMax Grow House allows for the use of the very popular Double Ended (DE) lighting fixtures and has plenty of head room to grow some very large plants! 8 double doors spaced out on each side of the Grow House grow tent allows to total access to your the plants inside.

Please Note:

- B & C poles interlock together as shown below (Fig. A)
- Metal corners should be attached as shown below (Fig. B)
- Please be patient and gentle while pulling the roof skin over the frame to avoid any tearing seams

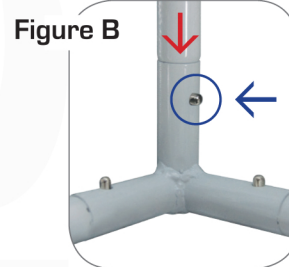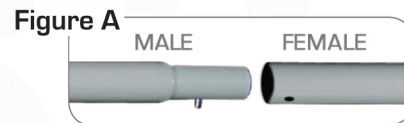

1. Depress chrome nipples and insert male connectors into female receiver slots.
2. Allow chrome nipples to lock into place through female connectors.

NEW AgroMax LINER PATTERN




RECOMMENDED: 3 - 5 People to assemble



1 Lay down your floor skin (M) and assemble the frame as noted above



2 Drape the roof skin (K) over the top of the frame

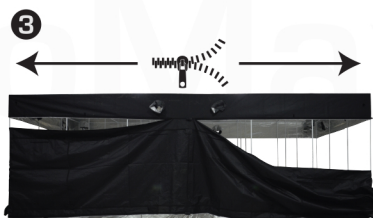

3 Pull up the wall skin (L) to the Roof Skin (K) and zip them together.



4 Zip the Wall Skin (K) to the Floor Skin (M). Lay the Floor Liners (N) length-wise inside the tent. Your tent is now assembled and ready for growing!