
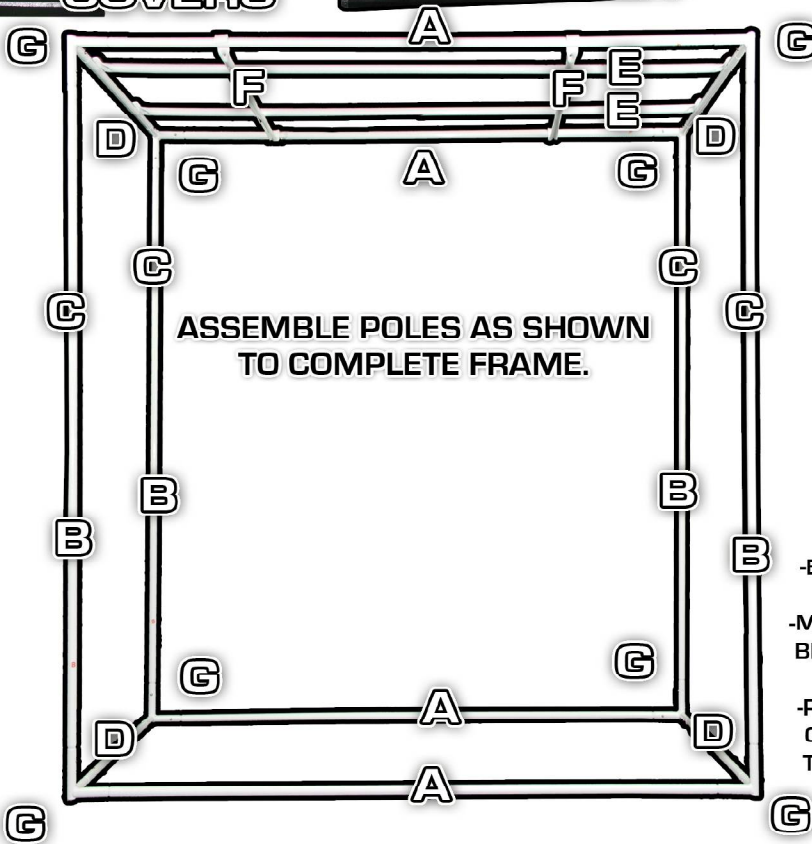



AgroMax

2X4 GROW TENT INSTRUCTIONS

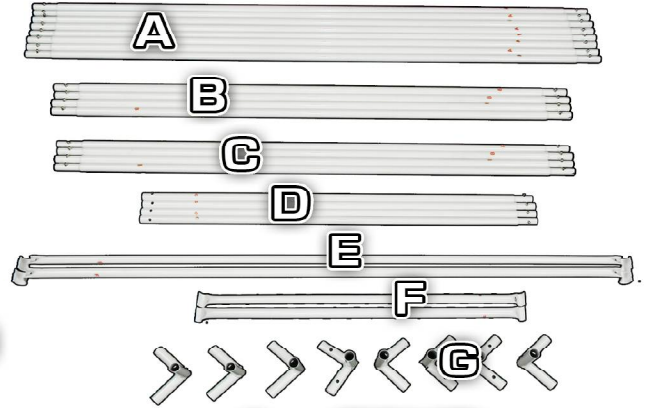

- A = FOUR
- B = FOUR
- C = FOUR
- D = FOUR
- E = TWO
- F = TWO
- G = 8 CORNERS

PLEASE NOTE:
 -B & C POLES ATTACH AS SHOWN IN FIGURE A
 -METAL CORNERS SHOULD BE ATTACHED AS SHOWN IN FIGURE B
 -PLEASE BE PATIENT AND GENTLE WHEN PULLING TENT SKIN OVER FRAME TO AVOID TEARING SEAMS

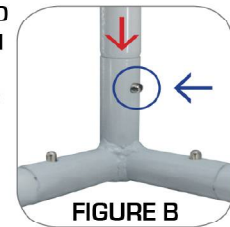

1. Depress chrome nipples and insert male connectors into female receiver slots.
2. Allow chrome nipples to lock into place through female connectors.



UNZIP TENT SKIN AND SET FRAME INTO BOTTOM OF TENT SKIN



PULL TENT SKIN OVER FRAME AND ZIP UP SIDES



LAY TENT FLOOR LINER IN PLACE AND TIE TO TENT CORNERS



ZIP UP DOOR PANELS. YOUR TENT IS NOW READY FOR LIGHTING, VENTILATION AND PLANTS