
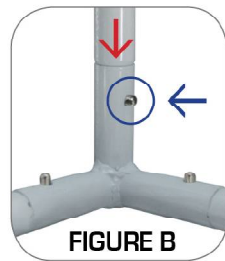
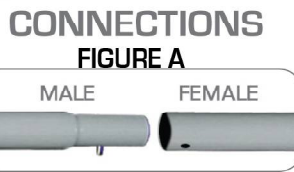
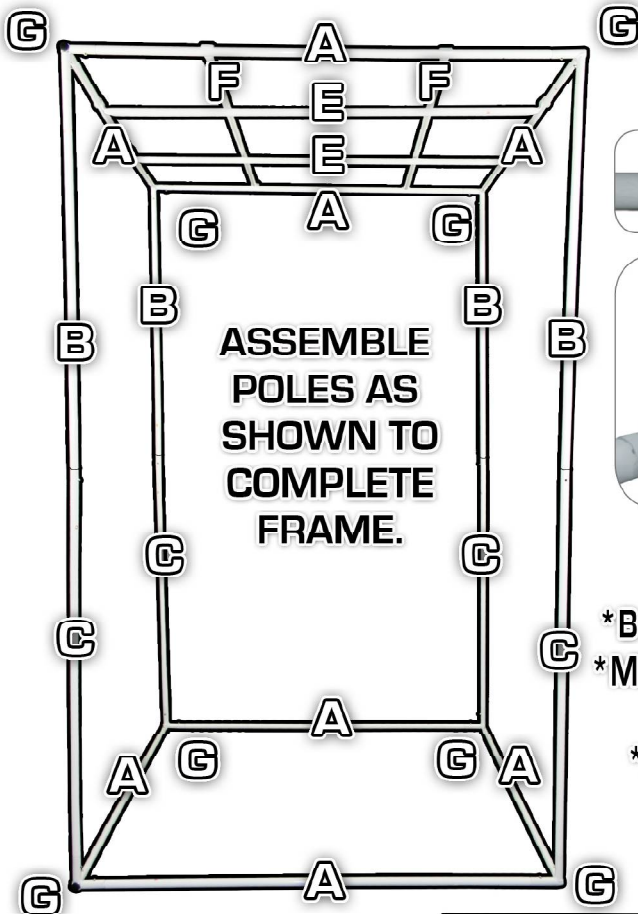


AgroMax

ORIGINAL GROW TENT INSTRUCTIONS

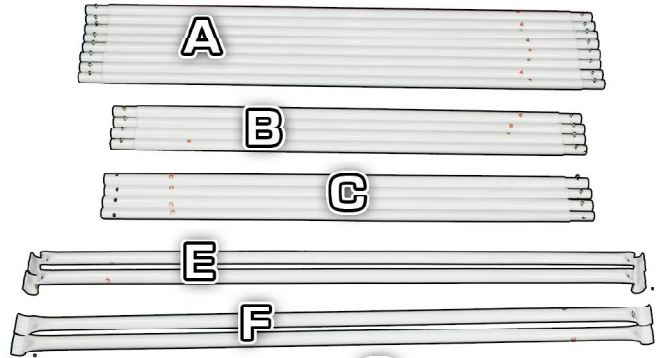

1. Depress chrome nipple and insert male connectors into female receiver slots.
2. Allow chrome nipples to lock into place through female connectors.

-
- A = EIGHT 36.75"
 - B = FOUR 39"
 - C = FOUR 38.75"
 - E = TWO 39.75"
 - F = TWO 39.75"
 - G = 8 CORNERS

PLEASE NOTE:

- * B & C POLES ATTACH TOGETHER AS SHOWN ABOVE (FIG. A)
- * METAL CORNERS SHOULD BE ATTACHED AS SHOWN (FIG. B)
- * VENT PORT COVERS GO OVER VENT HOLES
- * PLEASE BE PATIENT AND GENTLE WHEN PULLING SKIN OVER TENT FRAME TO AVOID TEARING SEAMS



UNZIP TENT SKIN AND SET FRAME INTO BOTTOM OF TENT SKIN



PULL TENT SKIN OVER FRAME AND ZIP UP SIDES



LAY TENT FLOOR LINER IN PLACE AND TIE TO TENT CORNERS



ZIP UP DOOR PANELS. YOUR TENT IS NOW READY FOR LIGHTING, VENTILATION AND PLANTS