

AgroMax

SUPER XXL

GROW TENT INSTRUCTIONS

H + yyyyyyy G

I yyy yxxxxxx J



A - Horizontal Poles



E - Roof Supports



B - Vertical Poles




F - Roof Supports



C - Vertical Poles




16 VENT COVERS

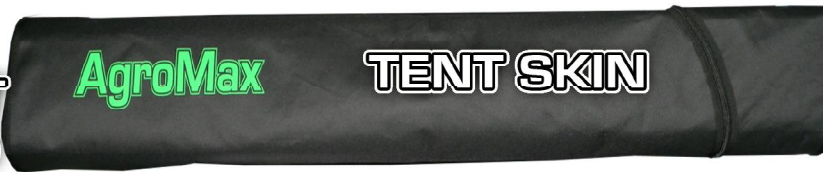

AgroMax

TENT SKIN

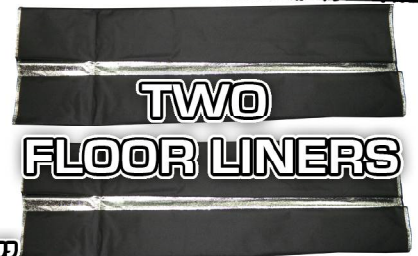

TWO FLOOR LINERS

A = TWENTY TWO 56.5"

B = NINE 38.75"

C = NINE 38.75"

E = EIGHT 59"

F = EIGHT 59.5"

G = 8 CORNERS CONNECTORS


H = ONE 5 WAY CONNECTOR

I = THREE 3 WAY CONNECTORS

J = SIX 4 WAY CONNECTORS

PLEASE
INVENTORY
PARTS
BEFORE
BEGINNING
ASSEMBLY

ASSEMBLE
POLES AS
SHOWN ON
BACK OF SHEET
TO COMPLETE
FRAME.

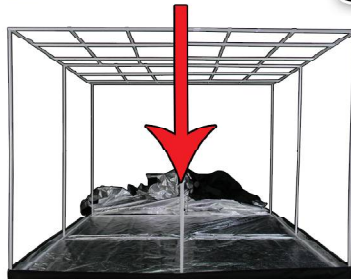

UNZIP TENT SKIN AND
ASSEMBLE FRAME ONTO
BOTTOM OF TENT SKIN

*See Back of Page for Frame Assembly



PULL TENT
SKIN OVER FRAME AND
ZIP UP SIDES

*Two People Recommended for this Step



LAY TENT FLOOR LINERS IN
PLACE AND TIE TO TENT
CORNERS & CENTER UPRIGHTS



ZIP UP DOOR PANELS.
YOUR TENT IS NOW READY
FOR LIGHTING, VENTILATION
AND PLANTS