
1. Introduction

Thank you for purchasing the AgroMax Signature Series 1000W Double-Ended fixture! Each ballast is factory-tested for approximately twelve hours to ensure optimal operation, and packed with advanced safeguards such as soft-start technology and a multi-aspect protection. In case of an auto-shutoff, please disconnect the ballast from the power supply and remove the faulty lamp or check for wiring/connection problems. Then restart the ballast after any possible issues have been identified and addressed. Please take a moment and review the rest of the manual to ensure proper use and best performance.

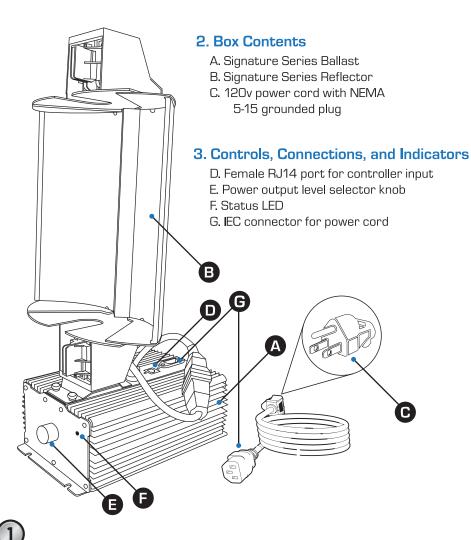

4. Product Information

4.1 Technical Specifications

Model	1000W 120V/240V	
Product Weight	6.0kg/13.22lb	
Dimensions (L/W/H)	579mm (22.79") x 236mm (9.29") x 271mm (10.67")	
Temperature Case	75° Celsius / 167° Fahrenheit	
Temperature Ambient	0- 35° Celsius / 32 - 95° Fahrenheit	
Input Voltage +/- 10%	120V	240V
Input Current at 100%	9.30A	4.60A
Input Power at 100%	1085W	1055W
Power Factor	>0.99	
Total Harmonic Distortion	<10%	
Frequency	50-60Hz	
Power Inlet	IEC C14	
Power Output Settings	600W / 750W / 825W / 1000W / 1150W / EXT (external controller)	
External Dimming	Controller Specific	
External Signal:	RJ14 External Controller Build in (6P4C)	
Ignition Voltage	5 kV	
Inrush Current	≤ 50 Amps	≤ 37.5 Amps
Plug Type	NEMA 5-15	

4.2 Operating Conditions

This AgroMax Signature Series 1000W DE fixture is designed to withstand damp environmental conditions; however, they are intended for indoor use only. Do not use or mount the ballast outdoors or in areas where there is a risk of direct exposure to water. Operational temperature: $20-30^{\circ}\text{C}/68-86^{\circ}\text{F}$.

5. Placement and Replacement of the Lamp

- 1. Switch off main power
- 2. Hold the lamp with fabric gloves for protection.
- 3. Open the lamp holders by sliding them outwards. (figure 1)
- 4. Carefully take the lamp out of the fixture. (figure 2)
- 5. Install the new lamp.
- 6. Use a fabric glove to carefully press the lamp into the fitting until the metal springs hold the lamp in place. (figure 3)
- 7. Close the lamp holders by sliding them inward. (figure 4)
- 8. Switch on the main power.







