

AgroMax

ORIGINAL SHORT STACK

GROW TENT INSTRUCTIONS



VENT PORT
COVERS

FLOOR LINER



E



F




A = EIGHT

B = FOUR


E = TWO

F = TWO

G = 8 CORNERS

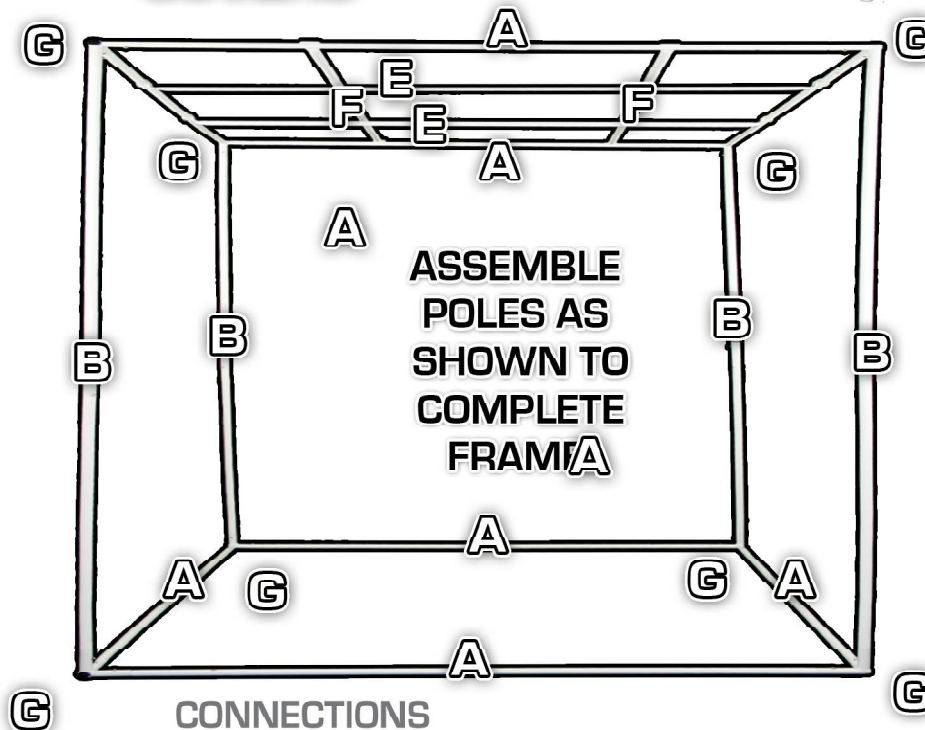

CONNECTIONS

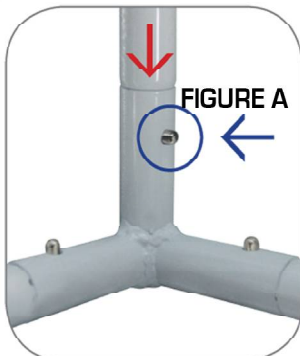

1. Depress chrome nipples and insert male connectors into female receiver slots.
2. Allow chrome nipples to lock into place through female connectors.

PLEASE NOTE:

* METAL CORNERS SHOULD BE ATTACHED AS SHOWN (FIG. A)

* VENT PORT COVERS GO OVER VENT HOLES

* PLEASE BE PATIENT AND GENTLE WHEN PULLING SKIN OVER TENT FRAME TO AVOID TEARING SEAMS



UNZIP TENT SKIN AND
SET FRAME INTO BOTTOM
OF TENT SKIN



PULL TENT
SKIN OVER FRAME AND
ZIP UP SIDES



LAY TENT FLOOR LINER IN
PLACE AND TIE TO TENT
CORNERS



ZIP UP DOOR PANELS.
YOUR TENT IS NOW READY
FOR LIGHTING, VENTILATION
AND PLANTS